

Fig. 18b. COMPONENT LOCATION
Type 9907

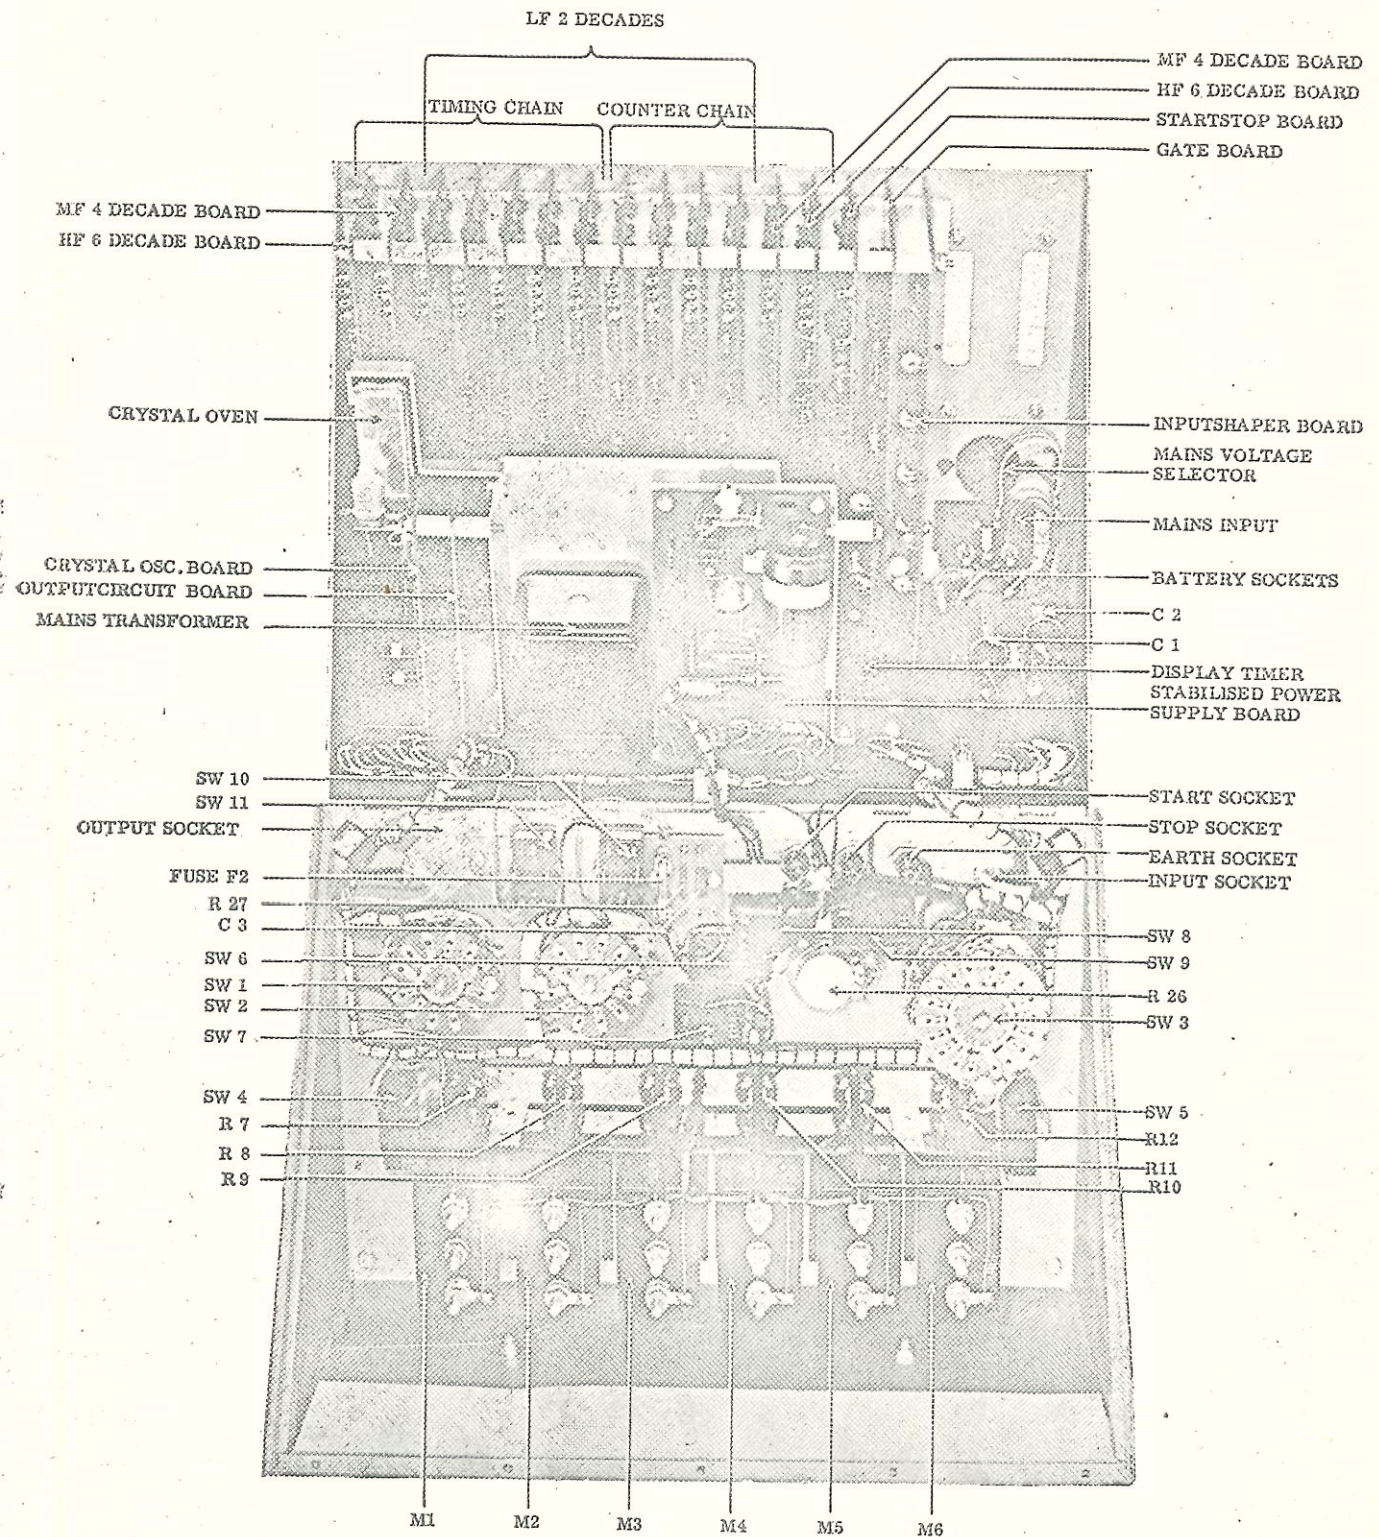


Fig. 18a. COMPONENT LOCATION
Type 9908

FIG.21-SENSITIVITY OF THE START & STOP INPUT.

