

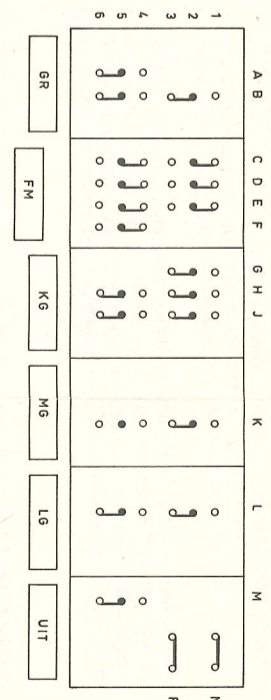


FM EENHEID
UNITÉ DE FM
FM EINHET

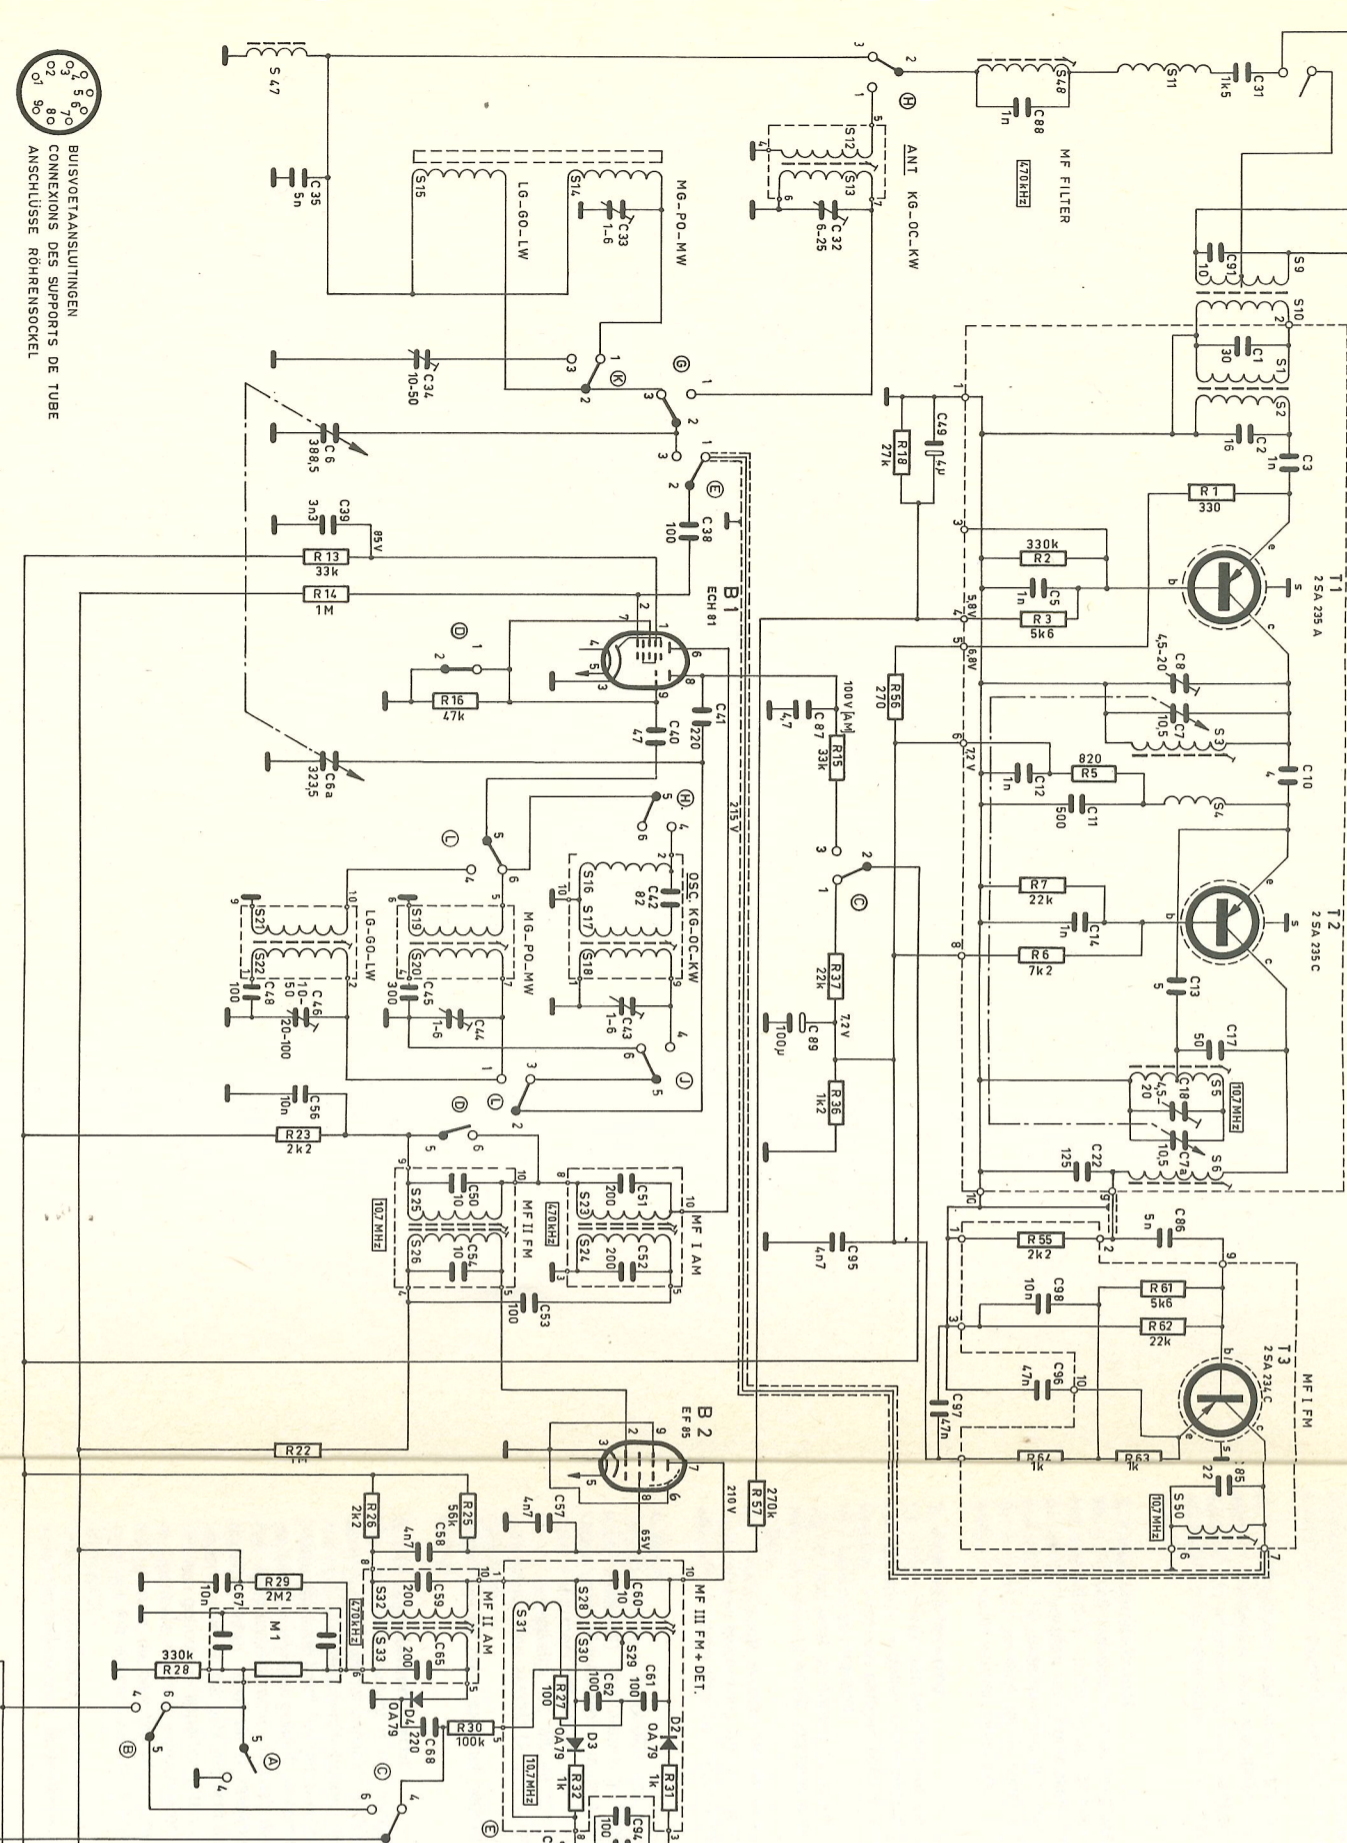

GOLFEREKSCHAKELAAR IN STAND FM
COMMUTEUR DE DAMMES DONDOS DANS LA POS. FM
WELLEBEREIKSCHALTER IN STAND FM

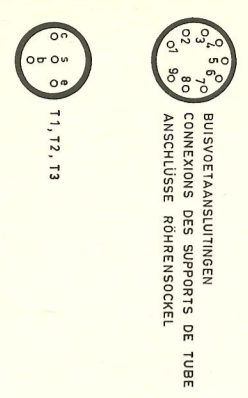

DE SPANNINGEN ZIJN GEMETEN T. O. V. L.
LES TENSIONS SONT MESURÉES ENVERS L.
DIE SPANNINGEN SIND GEMESSEN GEGEN L.

C	31	08	35	32	91	1	24	2	3	38	5	8	7	41	10	11	42	14	13	48	89	17	56	78	22	50	52	98	96	97	85	57	50	60	60	67	65	62	60	94	63	69	70	71	72	73	93	77	79	84	78	82	80	81	50	51	24	35	36	37	40	42	43	45	38
R	18	47	12	13	14	9	10	1	2	13	14	3	56	15	5	16	17	21	18	27	36	23	6	23	24	55	61	62	96	97	22	2	25	28	29	28	27	30	31	32	33	34	40	44	41	42	43	44	47	48	54	46	51	35	36	37	40	42	43	45	38				
S	18	47	12	13	14	9	10	1	2	13	14	3	56	15	5	16	17	21	18	27	36	23	6	23	24	55	61	62	96	97	22	2	25	28	29	28	27	30	31	32	33	34	40	44	41	42	43	44	47	48	54	46	51	35	36	37	40	42	43	45	38				

